


## 1. DESTINATION SEARCH

### 1. DESTINATION SEARCH


- 1 Press the "MENU" button on the Remote Touch.

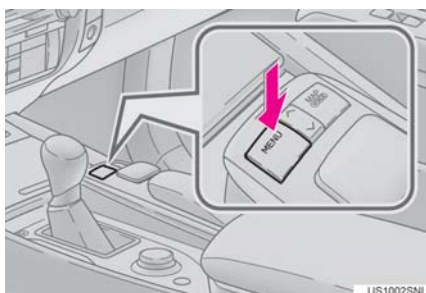

- 2 Select "Destination".



- 3 This screen is displayed.

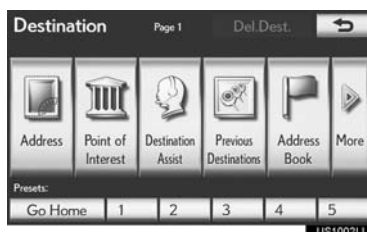

- One of 11 different methods can be used to search a destination. (See pages 67 through 83.)


#### INFORMATION

- When searching a destination, the response to the screen button may be slow.

### SELECTING THE SEARCH AREA

The selected state (province) can be changed to set a destination from a different state (province) by using "Address", "Point of Interest" or "Intersection & Freeway".

- 1 Select "Change State/Province" to display a list of the states/provinces/territories of the United States and Canada.

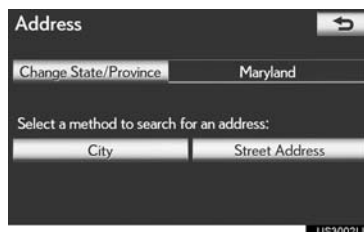

- For map database information and updates, see "MAP DATABASE VERSION AND COVERAGE AREA" on page 156.
- If a state (province) has not been selected yet, "Select State/Province" is displayed.


- 2 Select the desired state (province).



- The previous screen will be displayed.

## DESTINATION SEARCH BY HOME

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Destination"** on the "Menu" screen.
- 3 Select **"Go Home"**.

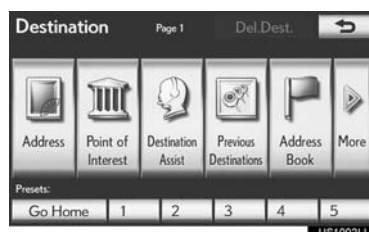

- Your home address is set as the destination. The navigation system performs a search for the route.
- 4 Select **"OK"**.


- To use this function, it is necessary to set a home address. (To register home, see page 108.)

**INFORMATION**

- If a home address has not been registered, a message confirming if it is desirable to set a home will be displayed, and the setting screen will appear.
- Guidance starts from the current position to the set home address if **"OK"** is selected even while driving.

## DESTINATION SEARCH BY PRESET DESTINATIONS

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Destination"** on the "Menu" screen.
- 3 Select any of the preset destination buttons (1-5) on the "Destination" screen.

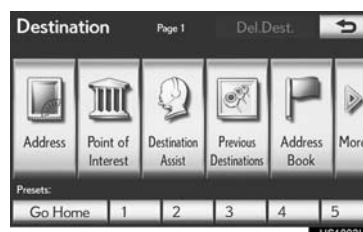

- The selected preset destination point is set as the destination. The navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 85.)
- 4 Select **"OK"**.

- To use this function, it is necessary to set preset destinations to the preset screen buttons (1-5). (See "REGISTERING PRESET DESTINATIONS" on page 110.)

3

NAVIGATION SYSTEM

## 1. DESTINATION SEARCH

### INFORMATION


- If a preset destination point has not been registered, a message confirming if it is desirable to set a preset destination will be displayed, and the setting screen will appear.
- Guidance starts from the current position to the preset destination point if "OK" is selected even while driving.

### DESTINATION SEARCH BY "Address"

There are 2 methods to search a destination by address:


- (a) Search by city
- (b) Search by street address

- 1 Press the "MENU" button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select "Destination" on the "Menu" screen.
- 3 Select "Address" on the "Destination" screen.
- 4 Select a screen button to select the desired search method.

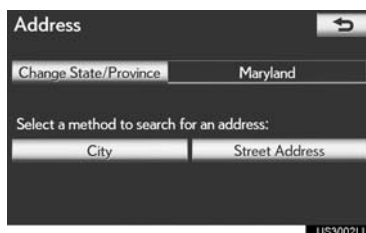

### SELECTING A CITY TO SEARCH

- 1 Press the "MENU" button on the Remote Touch, then select "Destination".
- 2 Select "Address" on the "Destination" screen.
- 3 Select "City".

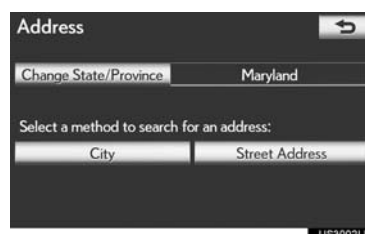

- 4 Input a city name.




- 5 Select the screen button of the desired city name from the displayed list.



- 6 Input the street name and select “OK”.



- 7 When the desired street name is found, select the corresponding screen button.

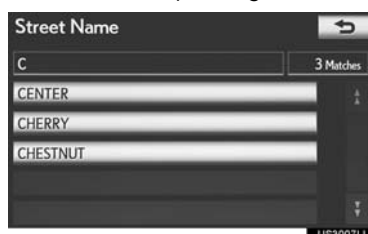

- When the desired street name is selected, the “Confirm Destination” screen may be displayed. If “Go” is selected on the “Confirm Destination” screen, the navigation system performs a search for the route. (See “STARTING ROUTE GUIDANCE” on page 85.)

- 8 Input a house number.



- If the same address exists in more than one city, the current screen changes to the address list screen.

## SEARCHING FROM THE LAST 5 CITIES

- 1 Select “Last 5 Cities”.



- 2 Select the screen button of the desired city name from the displayed list.



- The current screen changes to the screen for inputting a street name. (See “SELECTING A CITY TO SEARCH” on page 68.)


### INFORMATION

- If the navigation system has never been used, this function will not be available.

## 1. DESTINATION SEARCH

### SEARCH BY STREET ADDRESS

- 1 Press the "MENU" button on the Remote Touch, then select "Destination".
- 2 Select "Address" on the "Destination" screen.
- 3 Select "Street Address".

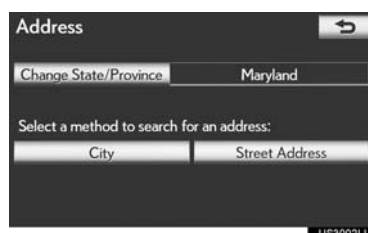

- 4 Select numbers directly on the screen to input the house number.




- After inputting the house number, select "OK" to display the screen for inputting the street name.

- 5 Input the street name and select "OK".



- 6 When the desired street name is found, select the corresponding screen button.

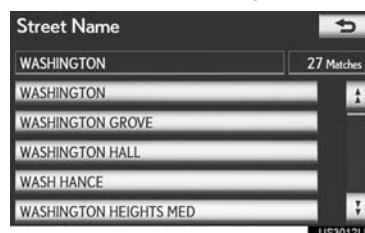


- When the desired street name is selected, the "Confirm Destination" screen may be displayed. If "Go" is selected on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 85.)

- If the same address exists in more than 1 city, a screen requesting the city name to be input or selected will be displayed.

- 7 Input a city name.



- 8 Select the screen button of the desired city name from the displayed list.

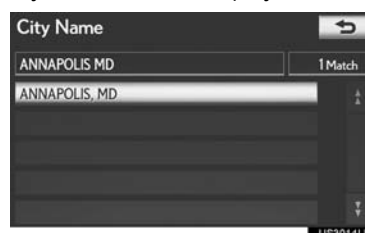


**INFORMATION**

- A street name can be searched using only the body part of its name.
- For example: S WESTERN AVE
  - A search can be performed by inputting "S WESTERN AVE", "WESTERN AVE" or "WESTERN".

**DESTINATION SEARCH BY "Point of Interest"**

There are 4 methods to search a destination by Points of Interest:


- Search by name
  - Search by category
  - Search by phone #
  - Search by eDestination
- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
  - 2 Select **"Destination"** on the "Menu" screen.
  - 3 Select **"Point of Interest"** on the "Destination" screen.
  - 4 Select a screen button to select the desired search method.

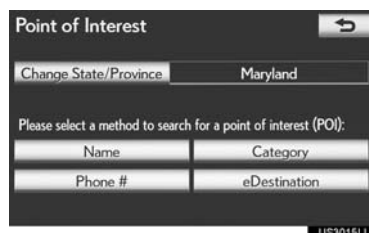**SEARCH BY "Name"**

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Destination"**.
- 2 Select **"Point of Interest"** on the "Destination" screen.
- 3 Select **"Name"** on the "Point of Interest" screen.
- 4 Input the name of the POI.




- 5 Select the screen button of the desired destination.

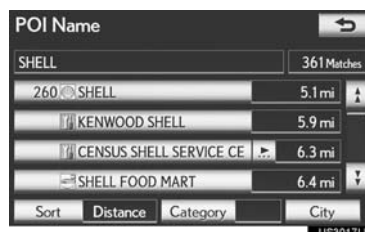

- When the desired destination is selected, the "Confirm Destination" screen may be displayed. If **"Go"** is selected on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 85.)
- When inputting the name of a specific Point of Interest, and there are 2 or more sites with the same name, the list screen is displayed.

## 1. DESTINATION SEARCH

- 6 Select the screen button of the desired destination.

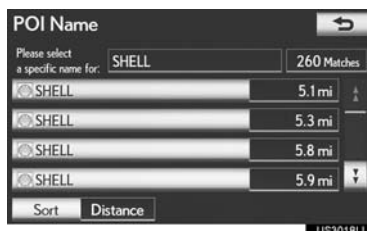

- If the same name exists in more than one city, a search can be performed more easily using “City” or “Category”. (See “SELECTING A CITY TO SEARCH” on page 68 and “SELECTING FROM THE CATEGORIES” on page 73.)


- The desired Point of Interest can be displayed on the map screen. (See “DISPLAY POI ICONS” on page 103.)

### INFORMATION

- To search for a facility name using multiple search words, put a space between each word.

## SELECTING A CITY TO SEARCH

- 1 Select “City”.

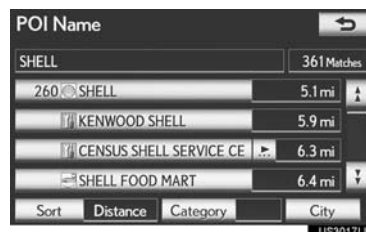


- 2 Input the city name.




- To cancel the city setting, select “Any City”.

- 3 Select the screen button of the desired city name from the displayed list.

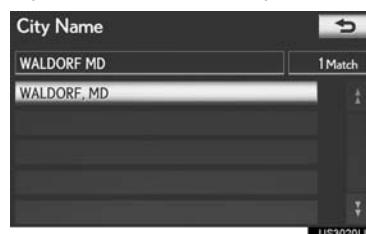


## SELECTING FROM THE CATEGORIES

### 1 Select "Category".

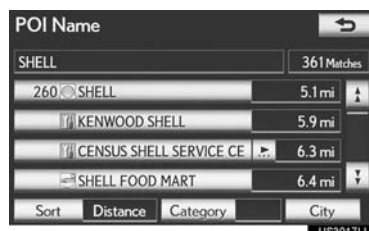

### 2 Select the screen button of the desired category.

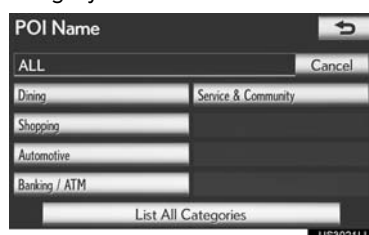

- If the desired POI category is on the screen, select its screen button to display a detailed list of the POI category.
- If the desired POI category is not on the screen, select "List All Categories" to list all POI categories.




- When the desired category is selected, the POI name list screen is displayed.

## SEARCH BY "Category"

The destination can be set by selecting the search point and the POI category.

- 1 Press the "MENU" button on the Remote Touch, then select "Destination".
- 2 Select "Point of Interest" on the "Destination" screen.
- 3 Select "Category".

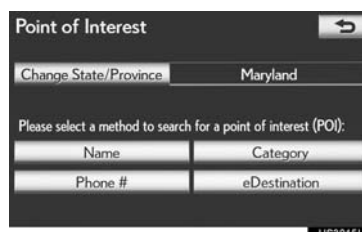

- 4 This screen is displayed.



- Set the search point by one of the following methods:
  - Set the search point from near the current position
  - Set the search point from along the selected route
  - Set the search point from near a city center
  - Set the search point from near a destination



## 1. DESTINATION SEARCH

### INFORMATION

- The names of POIs located within approximately 200 miles (320 km) from the selected search point can be displayed.

### ■ SETTING THE SEARCH POINT FROM NEAR HERE

- 1 Select **"Near Here"**.
- The search point is set at the current position, and the "POI Category" screen will be displayed. (See page 76.)

### ■ SETTING THE SEARCH POINT FROM ALONG MY ROUTE


- 1 Select **"Along My Route"**.
- The search point is set and the "POI Category" screen will be displayed. (See page 76.)

### ■ SETTING THE SEARCH POINT FROM NEAR CITY CENTER

- 1 Select **"Near a City Center in XX"**.
- 2 Input the city center name.



- 3 Select the screen button of the desired city center name.

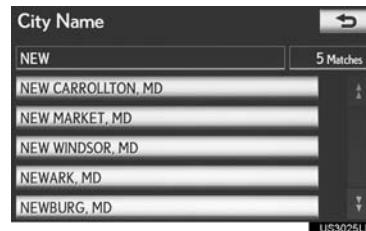

- The search point is set and the "POI Category" screen will be displayed. (See page 76.)
- \*: XX represents the selected search area name.

### ■ SELECTING FROM THE LAST 5 CITIES

- 1 Select "Near a City Center in XX\*".
- 2 Select "Last 5 Cities".



- 3 Select the screen button of the desired city center name.




- The search point is set and the "POI Category" screen will be displayed. (See page 76.)

\*: XX represents the selected search area name.

### ■ SETTING THE SEARCH POINT FROM NEAR A DESTINATION

- 1 Select "Near a Destination".
- 2 Select the screen button of the desired destination.

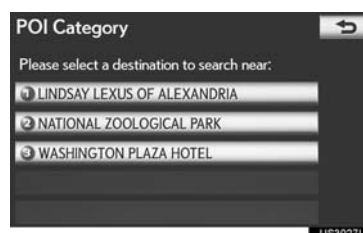

- The search point is set and the "POI Category" screen will be displayed. (See page 76.)

3


NAVIGATION SYSTEM

## 1. DESTINATION SEARCH

### ■ TO SEARCH FOR POIs NEAR THE SEARCH POINT


When the search point is set, the "POI Category" screen will be displayed.

#### 1 Select the desired POI category.

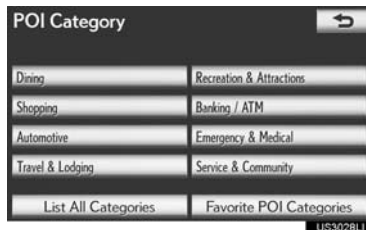

- If the desired POI category is not on the screen, select **"List All Categories"** to list all POI categories.
- If **"Favorite POI Categories"** is selected, a search can be performed using the 6 POIs that have been previously set. For more details, see "POI CATEGORY CHANGE (SELECT POI ICONS)" on page 126.

#### 2 Select the desired POI category from the list.

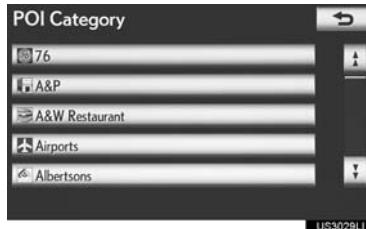

#### 3 Select the screen button of the desired item.




- When the desired item is selected, the "Confirm Destination" screen may be displayed. If **"Go"** is selected on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 85.)

## SEARCH BY "Phone #"

- 1 Press the "MENU" button on the Remote Touch, then select "Destination".
- 2 Select "Point of Interest" on the "Destination" screen.
- 3 Select "Phone #" on the "Point of Interest" screen.
- 4 Input a phone number.



- 5 After inputting a phone number, select "OK".
- When a phone number is input, the "Confirm Destination" screen may be displayed. If "Go" is selected on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 85.)
  - If there is more than one site with the same number, the following screen will be displayed.

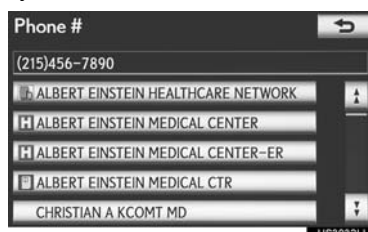


- To set an address book entry as a destination using the phone number, the number must already be registered with the address book entry. (See page 116.)

## INFORMATION

- If there is no match for the phone number input, a list of identical numbers with different area codes will be displayed.

## SEARCH BY "eDestination"

- 1 Press the "MENU" button on the Remote Touch, then select "Destination".
  - 2 Select "Point of Interest" on the "Destination" screen.
  - 3 Select "eDestination" on the "Point of Interest" screen.
- With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system. You can store up to 200 locations online to access and update at any time. Your locations can be organized into up to 20 folders. (See "eDestination" on page 199.)

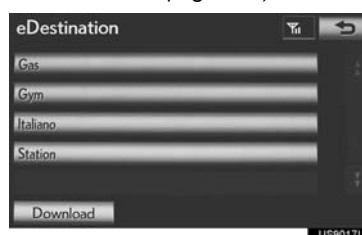

3

NAVIGATION SYSTEM

## 1. DESTINATION SEARCH


### DESTINATION SEARCH BY "Destination Assist"

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
  - 2 Select **"Destination"** on the "Menu" screen.
  - 3 Select **"Destination Assist"** on the "Destination" screen.
- Destination Assist provides you with live assistance for finding destinations via the Lexus Enform with Safety Connect response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI). After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system. (See "Destination Assist" on page 197.)



### DESTINATION SEARCH BY "Previous Destinations"

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Destination"** on the "Menu" screen.
- 3 Select **"Previous Destinations"** on the "Destination" screen.
- 4 Select the screen button of the desired destination.

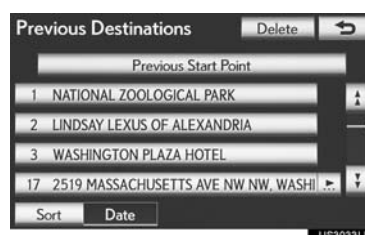

- The previous starting point and up to 100 previously set destinations are displayed on the screen.

**"Delete"**: Select to delete the previous destination. (To delete previous destinations, see page 84.)


- When the desired destination is selected, the "Confirm Destination" screen may be displayed. If **"Go"** is selected on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 85.)

- The list of previous destinations can also be deleted by selecting **"Delete Previous Dest."** on the "Navigation Settings" screen when the vehicle is stopped. (See "DELETING PREVIOUS DESTINATIONS" on page 122.)

- When the desired address book entry is selected, the "Confirm Destination" screen may be displayed. If **"Go"** is selected on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 85.)

### DESTINATION SEARCH BY "Address Book"

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Destination"** on the "Menu" screen.
- 3 Select **"Address Book"** on the "Destination" screen.
- 4 Select the screen button of the desired address book entry.

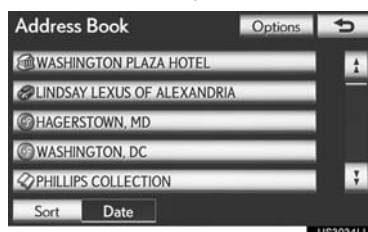

- A list of registered address book entries is displayed.

**"Options"**: Select to register or edit address book entries. (See page 114.)

### DESTINATION SEARCH BY "Emergency"

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Destination"** on the "Menu" screen.
- 3 Select **"Emergency"** on the second page of the "Destination" screen.
- The display changes to a screen to select police stations, dealers, hospitals or fire stations.
- 4 Select the desired emergency category.




- The selected emergency category is displayed.

3

NAVIGATION SYSTEM

## 1. DESTINATION SEARCH

- 5 Select the screen button of the desired destination.

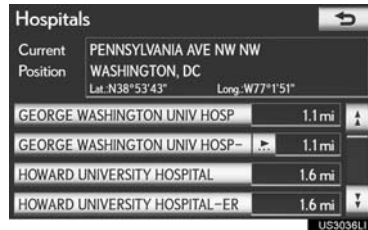

- When the desired destination entry is selected, the “Confirm Destination” screen may be displayed. If “Go” is selected on the “Confirm Destination” screen, the navigation system performs a search for the route. (See “STARTING ROUTE GUIDANCE” on page 85.)

### INFORMATION


- The navigation system does not guide in areas where route guidance is unavailable. (See page 138.)
- The emergency function can be used even while driving.
- While driving, only the currently displayed items and the items on the next page can be viewed.

## DESTINATION SEARCH BY “Intersection & Freeway”

There are 2 methods to search a destination by Intersection & Freeway:

- (a) Search by intersection
- (b) Search by freeway

- 1 Press the “MENU” button on the Remote Touch. (See “Remote Touch” on page 10.)
- 2 Select “Destination” on the “Menu” screen.
- 3 Select “Intersection & Freeway” on the second page of the “Destination” screen.
- 4 Select a screen button to select the desired method.

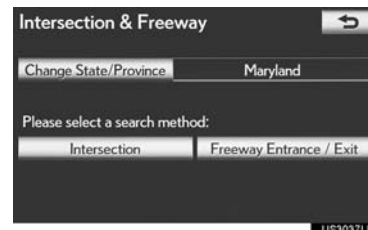

## SEARCH BY "Intersection"

- 1 Press the "MENU" button on the Remote Touch, then select "Destination".
- 2 Select "Intersection & Freeway" on the second page of the "Destination" screen.
- 3 Select "Intersection" on the "Intersection & Freeway" screen.
- 4 Input the name of the first intersecting street which is located near the destination to be set, and select "OK".




- 5 Select the screen button of the desired item.



- 6 Input the name of the second intersecting street.




- 7 Select the screen button of the desired item.

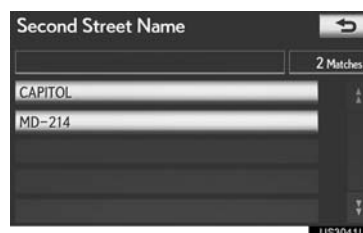

- When the desired item is selected, the "Confirm Destination" screen may be displayed. If "Go" is selected on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 85.)

## INFORMATION

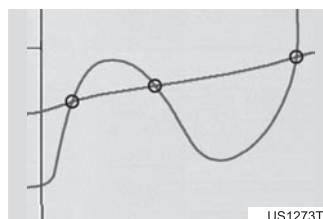

- If the same 2 streets cross at more than 1 intersection, the screen changes and displays the menu to select the city name where the streets intersect. Select the city, and the map location of the selected destination and the route preference. (See "STARTING ROUTE GUIDANCE" on page 85.)




## 1. DESTINATION SEARCH

### SEARCH BY "Freeway Entrance / Exit"

- 1 Press the "MENU" button on the Remote Touch, then select "Destination".
- 2 Select "Intersection & Freeway" on the second page of the "Destination" screen.
- 3 Select "Freeway Entrance / Exit" on the "Intersection & Freeway" screen.
- 4 Input a freeway name.



- 5 Select the screen button of the desired freeway.

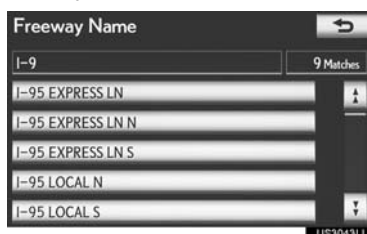


- 6 Select a freeway "Entrance" or "Exit".



- 7 Input a freeway entrance or exit name, and select "OK".



- 8 Select the screen button of the desired entrance or exit name.

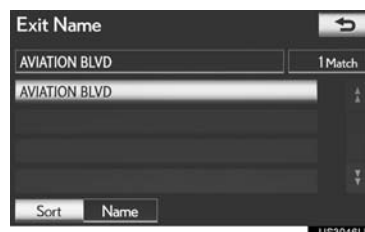


- When the desired entrance or exit is selected, the "Confirm Destination" screen may be displayed. If "Go" is selected on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 85.)

#### INFORMATION

- Be sure to use the complete name of the freeway or highway, including the hyphen, when entering the destination. Freeways and interstates use an "I" (I-405). US highways use the state designation before the number (CA-118).

DESTINATION SEARCH BY  
"Map"


- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Destination"** on the "Menu" screen.
- 3 Select **"Map"** on the second page of the "Destination" screen.
- 4 Scroll the map to the desired point.

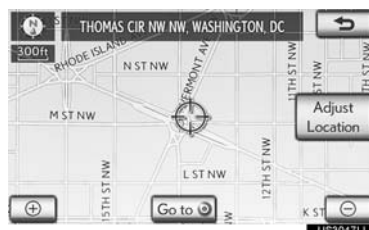

- 5 Select **"Go to"**.
  - The navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 85.)
  - Guidance starts if **"OK"** is selected even while driving. However, the cursor cannot be moved.

DESTINATION SEARCH BY  
"Coordinates"

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Destination"** on the "Menu" screen.
- 3 Select **"Coordinates"** on the second page of the "Destination" screen.
- 4 Input the latitude and the longitude.

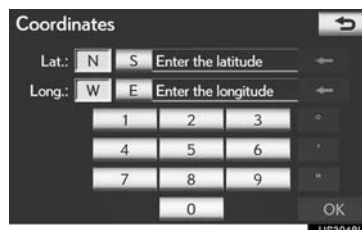


- 5 After inputting the latitude and longitude, select **"OK"**.
  - When the desired screen button is selected, the "Confirm Destination" screen may be displayed. If **"Go"** is selected on the "Confirm Destination" screen, the navigation system performs a search for the route. (See "STARTING ROUTE GUIDANCE" on page 85.)

## 1. DESTINATION SEARCH

### DELETING SET DESTINATIONS


A set destination can be deleted.

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Destination"** on the "Menu" screen.
- 3 Select **"Del.Dest."** on the "Destination" screen.
  - When more than 1 destination is set, a list will be displayed on the screen.
- 4 Select the destination to be deleted.

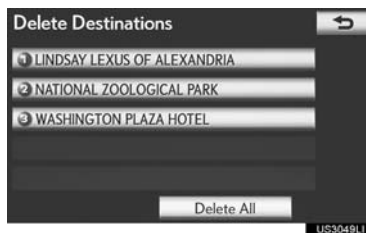

**"Delete All":** Select to delete all destinations on the list.

- 5 Select **"Yes"** to delete the destination(s).

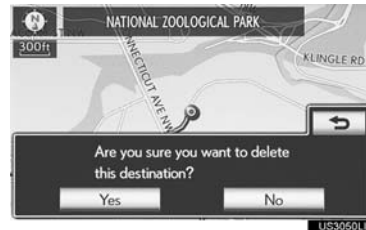

- A message appears to confirm the request to delete.
  - If **"Yes"** is selected, the data cannot be recovered. If more than 1 destination has been set, the system will recalculate the route(s) to the set destination(s) as necessary.
  - If **"No"** is selected, the previous screen will be displayed.
- Set destinations can also be deleted by selecting **"Route"**. (See "DELETING DESTINATIONS" on page 97.)

## 1. DESTINATION SEARCH

## 2. STARTING ROUTE GUIDANCE

When **"Map"** is selected on the "Confirm Destination" screen, the map screen will be displayed. The map location of the selected destination can be set as a destination.

1 Scroll the map to the desired point.



**"Adjust Location"**: Select to adjust the position in smaller increments.



- When an arrow facing the desired point is selected, the map scrolls in that direction.
- When the screen button is released, the scrolling stops.

2 Select **"Go to"**.

- The system starts route search and displays recommended routes.


- If a destination has already been set, **"Go to"** and **"Add to Route"** will be displayed.

**"Go to"**: Select to delete the existing destination(s) and set a new one.

**"Add to Route"**: Select to add a destination.

**"Info"**: If this screen button is displayed on the top of the screen, select it to view items such as name, address, position and phone number.

3 To start guidance, select **"OK"**.

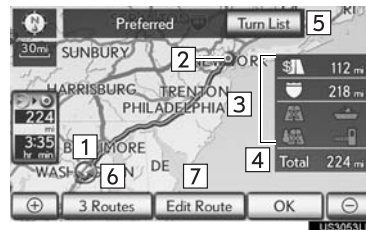

No.	Function
1	Current position
2	Destination point
3	Type of route and its distance
4	Distance of the entire route

3

NAVIGATION SYSTEM

## 1. DESTINATION SEARCH

No.	Function
5	Select to display a list of the turns required to reach the destination.
6	To select the desired route from 3 possible routes. (See page 87.)
7	Select to change the route. (See page 88.)

- Guidance can be paused or resumed. (See "PAUSING AND RESUMING GUIDANCE" on page 102.)
- If "OK" is selected until a beep sounds, demo mode will start. Press the "MAP/VOICE" button on the Remote Touch to end demo mode.



### CAUTION

- Be sure to obey traffic regulations and keep road conditions in mind while driving. If a traffic sign on the road has been changed, the route guidance may not indicate such changed information.

### INFORMATION


- The route for returning may not be the same as that for going.
- The route guidance to the destination may not be the shortest route nor a route without traffic congestion.
- Route guidance may not be available if there is no road data for the specified location.
- When setting the destination on a map with a scale larger than 0.5 miles (800 m), the map scale changes to 0.5 miles (800 m) automatically. If this occurs, set the destination again.
- If a destination that is not located on a road is set, the vehicle will be guided to the point on a road nearest to the destination. The road nearest to the point selected is set as the destination.

3 ROUTES SELECTION

- 1 Select “3 Routes” to select the desired route from 3 routes.



- 2 Select “Preferred”, “Alternate” or “Short” to select the desired route.

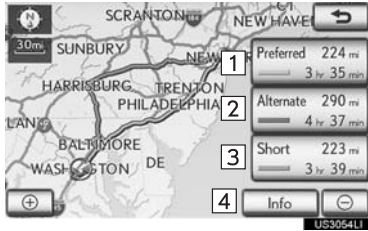

No.	Function
1	Select to display the recommended route. This route is indicated by an orange line.
2	Select to display the alternative route. This route is indicated by a purple line.
3	Select to display the route that is the shortest distance to the set destination. This route is indicated by a green line.
4	Select to display the information shown below about each of the 3 routes.

3 Routes Information			
	Preferred	Alternate	Short
1	3 hr 35 min	4 hr 37 min	3 hr 39 min
2	224 mi	290 mi	223 mi
3	112 mi	7.2 mi	107 mi
4	218 mi	284 mi	212 mi
5			

No.	Function
1	Time necessary for the entire trip
2	Distance of the entire trip
3	Toll road
4	Freeway
5	Ferry

1.DESTINATION SEARCH


EDIT ROUTE

Conditions for the route to the destination can be set again.

1 Select “Edit Route”.



2 This screen is displayed.

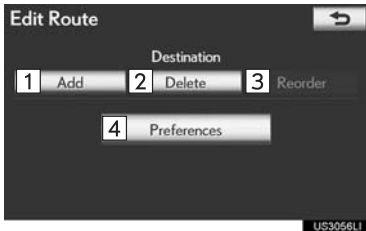

No.	Function	Page
1	Select to add destinations.	96
2	Select to delete destinations.	97
3	Select to reorder destinations.	96
4	Select to display the choices available when setting the conditions the system uses to determine the route to the destination.	100

INFORMATION

- Even if the “Freeways” indicator is dimmed, the route cannot avoid including a freeway in some cases.
- If the calculated route includes a trip by ferry, the route guidance shows a sea route. After you travel by ferry, the current position may be incorrect. Upon reception of GPS signals, it is automatically corrected.